

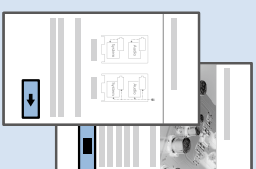




SONY®






DMP-Z1






1

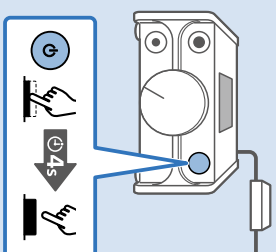






4-740-662-11(1)
©2018 Sony Corporation
Printed in Malaysia / Imprimé en Malaisie


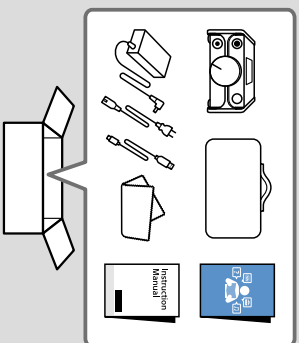




2

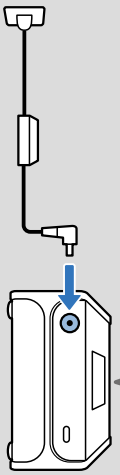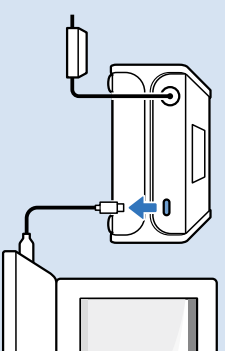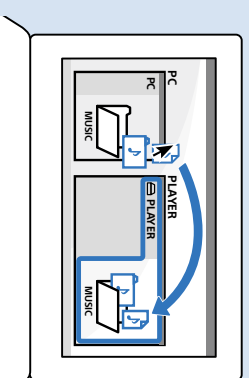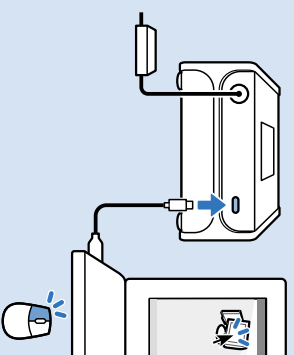
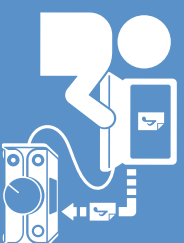


3

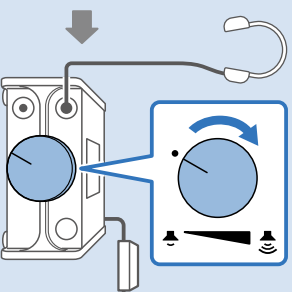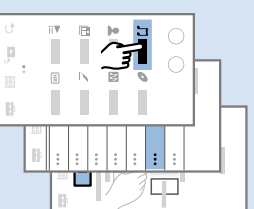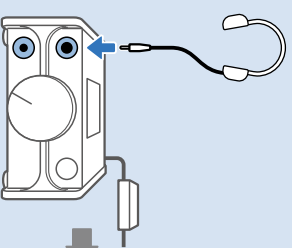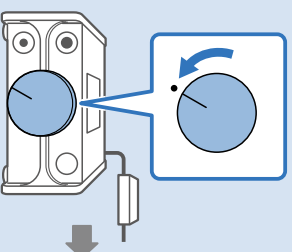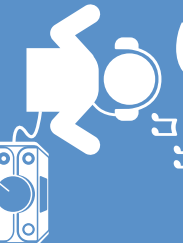

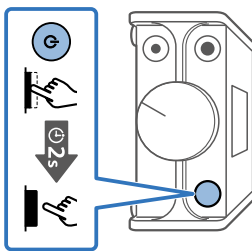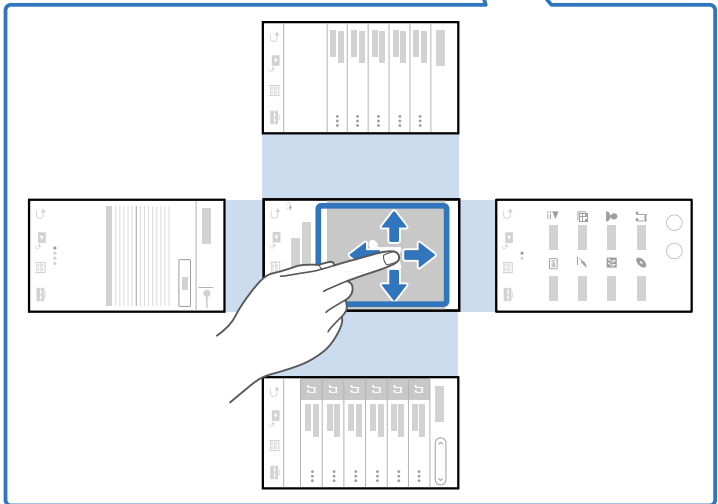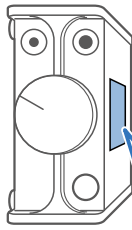

http://rd1.sony.net/help/dmp/dmpzt/h_ww/

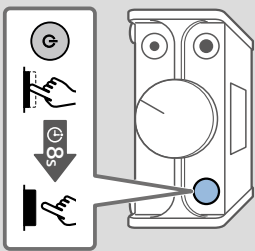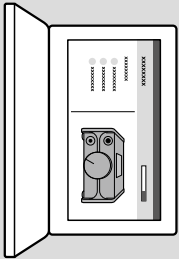

Windows
Music Center for PC
<https://www.sony.net/sm4pc/>